

Water Filling Station and Overhead Standpipe Instructions

Please Ensure a Copy Remains In Truck At All Times

Access to Site Take care when approaching and entering the water filling station site.

Pay particular attention to pedestrians and other motorists. Obey

traffic rules.

Parking Position truck to allow safe and efficient access. Take care when

stationary on the road side including entering and exiting the vehicle.

Wear a hi-vis vest.

Pedestrian Safety Minimise obstruction of the footpath and take all safety precautions

including the positioning of safety cones to prevent the risk of tripping

hazards or injury to pedestrians.

Overhead Filling Drive under flexible hose until it enters the tank.

Maximum truck/tanker filling inlet height 3.9m Minimum tanker filling inlet height 2.4m

Minimum tank inlet 200mm diameter

For Safety Do Not Climb Onto Tanker

Culcairn Cabinet Door

Use the small steel key No. 1333 provided to unlock the top section of the water filling station.

Jindera, Burrumbuttock, Brocklesby and Gerogery Cabinet Doors

Use the large steel key No. 5295 FS provided to unlock padlock on filling station door.

Water Flow

Follow the operating instructions displayed on the screen interface. (As shown below)

- 1. Allow the "scan iButton" screen to appear.
- 2. Touch iButton on reader for 3 seconds.
- 3. Press green Start button to start flow.
- 4. Water will start to dispense.
- 5. Press red Stop button to stop flow and finish transaction. (Shut down of water supply can take up to 10 seconds)
- 6. The litres dispensed will be displayed on the screen.
- 7. Please close and lock door with key.

Exit

Take care exiting the water filling station site. Pay particular attention to pedestrians and other motorists.

For Service Difficulties and Faults - Please Call 02 6036 0100

To Report Damage or Vandalism – Please Call 02 6036 0100

Electronic Version is the controlled version. P	Printed copies are considered uncontrolled. B	Before using a printed copy verify the	hat it is the current version
---	---	--	-------------------------------

Document Name	Version Number	Date of Issue	Review Date
ENG – Water Filling Station and Overhead Standpipe Instructions	1.0.0	29 June 2018	As Required